





### D 70x11 — P 7

Code	Height H (mm)	Length L (mm)	<b>Width</b> (mm)	N. flat tubes	Electric towel warmer Power W	Fan heater Power W	<b>Weight</b> (kg)
white or coloured without plug	3						
OPDRPCx631155S5	1191	550	130	11	500	1000	22,5
OPDRPCx631355S7	1422	550	130	14	700	1000	27,0
OPDRPCx631655S1	1730	550	130	17	1000	1000	33,0

x = 0: white /x = 9: coloured /x = 3: anthracite

The electric output is equal to the thermal output at operating mode.

## **Technical characteristics**

- Flat tubes dimension 70x11 mm
- Pipes distance 7 mm
- Round collectors 38mm
- Mains electricity supply: 230 V AC, 50Hz
- Class 2, IP24

## **Standard equipment**

- Fan, 1000W
- Remote control
- Kit of 4 brackets

#### **Electric installation**

- The radiator must be installed outside zone 1 [bathroom]
- The switch/electronic control must be in zone 3 (bathroom)
- For safety reasons, the radiator must not be installed beneath a mains socket
- Turning a towel warmer by 180° is not possible
- Every towel warmer has to be installed frontally, and the thermostat has to lie on the lower-right position

## **Special version**

- Cobalto hot water: available
- Chromed version: not available
- Coloured version: available

#### **Functions**

Cobalto E- Flow has the following operating modes:

- Electric towel warmer
- Fan
- Electric towel warmer and fan

The towel warmer has five functions:

 
- Comfort mode: the chosen temperature is regulated by the remote control
- Night mode: the electric towel warmer is regulated at 2°C below comfort temperature
- Pilot wire mode: the electric towel warmer can be adjusted remotely through a central electric radiator regulation system (mode available only in homes fitted with such a system)
- Timer mode: using the remote control, the on and off times of the towel warmer can be programmed hour by hour for the seven days of the week
- Two hour override function: when this function is activated, the radiator operates at maximum power for two hours to heat the room rapidly.
- Freeze prevention function: when the dial is on minimum, the towel warmer comes on automatically when room temperature drops below 7°C.

 



# Remote control included

#### COLOUR SCHEME


PRODUCT	FAN	REMOTE CONTROL	BRACKETS
white	white	white	white
coloured	black	anthracite	anthracite
anthracite	black	anthracite	anthracite





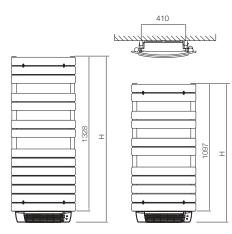

# Hidden brackets

 

XTB brackets included

Ersatzteil

white

Spare part code 550S010300

#### Remote control



included

Spare part code 5525010712	white
Spare part code 5525010722	anthracite

The exact order of the tubes and of the "openings" between the tubes themselves is that one showed in the technical drawings above; the picture in the page aside can sometimes be only apprroximate [regarding tubes and of the "openings" between the tubes themselves]